LUMINGLAS
SET-UP INSTRUCTIONS

1. REMOVE ALL OF THE PACKING MATERIAL FROM THE LUMINGLAS.

2. PLACE THE LUMINGLAS ON A LEVEL SURFACE. OPEN THE LEGS TO THE MAXIMUM POSITION AND BE SURE THAT THE LEFT AND RIGHT METAL LOCKS ARE FIRMLY LOCKED INTO POSITION (SEE DIAGRAM 1). PRESS THE TWO ROUND FRONT SUPPORTS ON THE BOTTOM OF THE LUMINGLAS SO THAT THEY ARE EQUALLY SPACED AND SUPPORTING THE LUMINGLAS (SEE DIAGRAM 1).

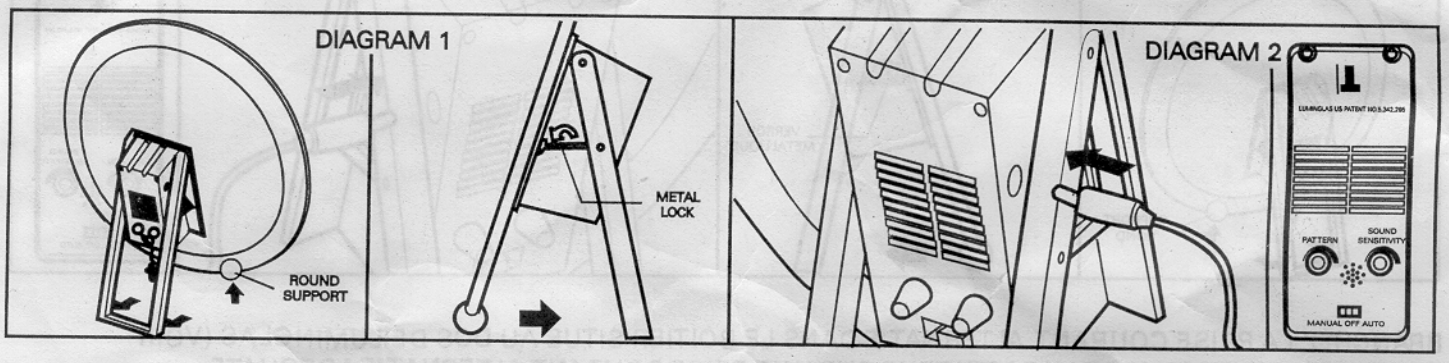

3. PLUG THE A/C JACK INTO THE RECEPTACLE ON THE SIDE OF THE LUMINGLAS (DIAGRAM 2). PLUG THE ADAPTOR INTO AN APPROPRIATE A/C OUTLET.

4. PLEASE REFER TO DIAGRAM 2. TURN THE ON/OFF SWITCH TO THE MANUAL POSITION. TURN THE PATTERN CONTROL KNOB FULLY CLOCKWISE. THE LUMINGLAS IS NOW REACTING IN ITS MAXIMUM SETTING. THE INTENSITY OF THE "LIGHTNING EFFECT" CAN BE CHANGED BY TURNING THE SOUND SENSITIVITY CONTROL CLOCKWISE UNTIL THE PREFERRED SETTING IS REACHED. NOW TOUCH THE SURFACE OF THE LUMINGLAS AND NOTICE HOW THE LUMINGLAS RESPONDS TO YOUR TOUCH. USE BOTH HANDS AND GATHER UP AND HOLD THE "LIGHTNING EFFECT" UNTIL YOU ARE READY TO LET IT GO. YOUR LUMINGLAS IS TRULY INTERACTIVE AND WILL RESPOND TO YOUR CONTACT.

5. SWITCH TO THE AUTO POSITION. TURN BOTH KNOBS FULLY COUNTER CLOCKWISE. THE LUMINGLAS IS NOW IN ITS MINIMUM SETTING. SLOWLY TURN THE PATTERN CONTROL KNOB CLOCKWISE AND NOTICE HOW THE PATTERN OF LIGHT CHANGES. TOUCH THE SURFACE AND SEE HOW THE LUMINGLAS RESPONDS TO YOUR TOUCH.

   TURN THE PATTERN CONTROL KNOB COUNTER CLOCKWISE UNTIL IT IS APPROXIMATELY IN THE MIDDLE OF ITS RANGE. TURN ON YOUR FAVORITE MUSIC OR TALK TO YOUR LUMINGLAS WHILE YOU SLOWLY TURN THE SOUND SENSITIVITY KNOB CLOCKWISE...NOTICE HOW THE LUMINGLAS WILL START RESPONDING TO YOUR VOICE OR MUSIC. THE WAY THE LUMINGLAS RESPONDS TO MUSIC WILL VARY DEPENDING ON THE VOLUME AND TYPE OF MUSIC PLAYING...EXPERIMENT WITH YOUR LUMINGLAS TO ACHIEVE THE BEST PERSONAL EFFECT.

6. YOUR LUMINGLAS HAS BEEN MANUFACTURED TO GIVE YOU MANY HOURS OF PLEASURE, AS WITH ANY ELECTRONIC DEVICE. PLEASE FOLLOW A FEW DOS AND DON'TS TO ENSURE YOUR SATISFACTION.

A. DO CLEAN YOUR LUMINGLAS PERIODICALLY WITH A CLEAN, DRY RAG OR FEATHER DUSTER.
B. DON'T USE ANY LIQUID CLEANER NEAR YOUR LUMINGLAS.
C. DON'T USE YOUR LUMINGLAS OUTDOORS. IT IS INTENDED FOR INDOORS USE ONLY.
D. DON'T LET YOUR LUMINGLAS COME IN CONTACT WITH WATER ON ANY SOLVENTS.
E. DON'T PLACE YOUR LUMINGLAS CLOSE TO YOUR APPLIANCES SUCH AS TVS, RADIOS, COMPUTERS, REMOTE CONTROLS, ETC. YOU MAY EXPERIENCE SOME INTERFERENCE. IF THIS SHOULD HAPPEN, MOVE YOUR LUMINGLAS TO ANOTHER LOCATION.

MODE D'EMPLOI DE LUMINGLAS

1. DEBALLEZ LUMINGLAS ENTIEREMENT.

2. POSEZ LUMINGLAS SUR UNE SURFACE PLANE. ECARTEZ LES PIEDS AU MAXIMUM ET ASSUREZ-VOUS QUE LES VERROUS METALLIQUES A DROITE ET A GAUCHE SONT BIEN EN PLACE (VOIR DIAGRAMME 1). APPUYEZ SUR LES DEUX SUPPORTS RONDS AVANT SUR LE FOND DE LUMINGLAS POUR QU'ILS SOIENT A DISTANCE EGALE L'UN DE L'AUTRE ET SOUTIENNENT AINSI LUMINGLAS (VOIR DIAGRAMME 1).

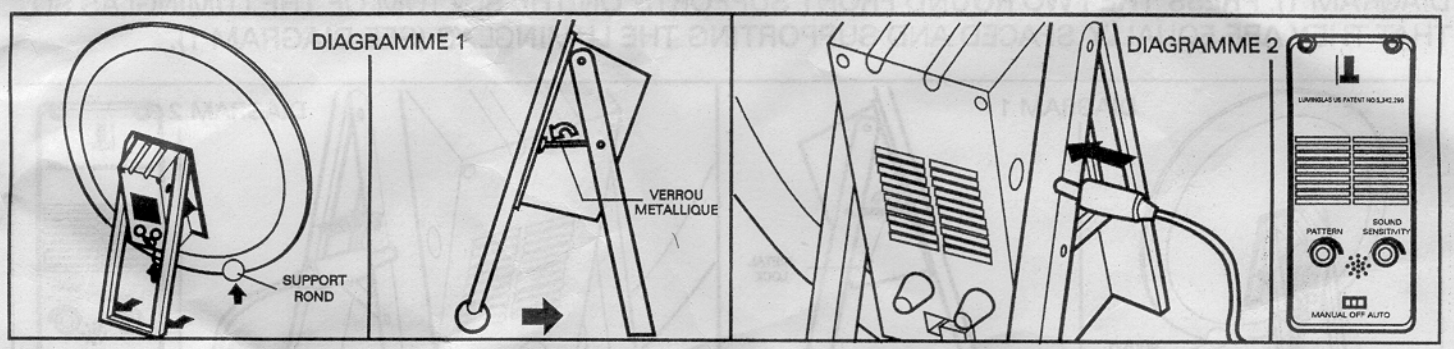

3. BRANCHEZ LA PRISE COURANT ALTERNATIF DANS LE BOITIER SITUE AU DOS DE LUMINGLAS (VOIR DIAGRAMME 2). BRANCHEZ L'ADAPTATEUR SUR UNE PRISE COURANT ALTERNATIF ADEQUATE.

4. REPORTEZ-VOUS AU DIAGRAMME 2. METTEZ L'INTERRUPTEUR MARCHE/ARRET SUR LA POSITION MANUELLE. FAITES TOURNER COMPLETEMENT LE BOUTON DE COMMANDE DES MOTIFS DANS LE SENS DES AIGUILLES D'UNE MONTRE. A PRESENT LUMINGLAS REAGIT A SON REGLAGE MAXIMUN. L'INTENSITE DE "L'EFFET D'ECLAIR" PEUT ETRE MODIFIE EN FAISANT TOURNER LA COMMANDE DE SENSIBILITE AU SON DANS LE SENS DES AIGUILLES D'UNE MONTRE JUSQU'A CE QUE LE REGLAGE SOUHAITE SOIT ATTEINT. ET MAINTENANT TOUCHEZ LA SURFACE DE LUMINGLAS ET VOUS VERREZ QUE LUMINGLAS EST SENSIBLE A VOTRE TOUCHER. UTILISEZ LES DEUX MAINS ET RASSEMBLEZ ET MAINTENEZ "L'EFFET D'ECLAIR" JUSQU'A CE QUE VOUS SOYEZ PRET A LE LAISSER DISPARAITRE. VOTRE LUMINGLAS EST VRAIMENT INTERACTIF ET SERA SENSIBLE A VOTRE CONTACT.

5. PASSEZ MAINTENANT A LA POSITION AUTOMATIQUE. FAITES TOURNER LES DEUX BOUTONS COMPLETEMENT DANS LE SENS OPPOSE DES AIGUILLES D'UNE MONTRE. LUMINGLAS EST ALORS A SON REGLAGE MINIMUM. FAITES TOURNER LENTEMENT LE BOUTON DE COMMANDE DES MOTIFS DANS LE SENS DES AIGUILLES D'UNE MONTRE ET VOUS VERREZ QUE LES MOTIFS LUMINEUX CHANGENT. TOUCHEZ LA SURFACE ET VOUS VERREZ QUE LUMINGLAS EST SENSIBLE A VOTRE TOUCHER.

FAITES TOURNER LE BOUTON DE COMMANDE DES MOTIFS DANS LE SENS OPPOSE DES AIGUILLES D'UNE MONTRE JUSQUA ENVIRON MOITIE. METTEZ VOTRE MUSIQUE PREFEREE OU BIEN PARLEZ A VOTRE LUMINGLAS TOUT EN FAISANT TOURNER LENTEMENT LE BOUTON DE SENSIBILITE AU SON DANS LE SENS DES AIGUILLES D'UNE MONTRE... VOUS VERREZ QUE LUMINGLAS COMMENCERA A ETRE SENSIBLE A VOTRE VOIX OU A LA MUSIQUE. LA MANIERE DONT LUMINGLAS SERA SENSIBLE A LA MUSIQUE DEPENDRA DU VOLUME ET DU TYPE DE MUSIQUE JOUE... FAITES DES EXPERIENCES AVEC VOTRE LUMINGLAS POUR OBTENIR LE MEILLEUR EFFET PERSONNALISE.

6. VOTRE LUMINGLAS A ETE FABRIQUE POUR VOUS APPORTER DE NOMBREUSES HEURES D'AMUSEMENT. COMME TOUS LES PRODUITS ELECTRONIQUES, NOUS VOUS DEMANDONS DE SUIVRE CES QUELQUES CONSEILS POUR QU'IL VOUS DONNE ENTIERE SATISFACTION.

A. NETTOYEZ REGULIEREMENT VOTRE LUMINGLAS A'AIDE D'UN CHIFFON SEC ET BIEN PROPRE OU BIEN D'UN PLUMEAU.
B. N'UTILISEZ JAMAIS DE NETTOYANT LIQUIDE A PROXIMITE DE VOTRE LUMINGLAS.
C. UTILISEZ VOTRE LUMINGLAS QU'EN INTERIEUR.
D. N'UTILISEZ PAS LUMINGLAS EN PLEIN AIR POUR UNE DUREE PROLONGEE CAR LES CONDITIONS METEO PEUVENT L'ENDOMMAGER.
E. NE POSEZ PAS VOTRE LUMINGLAS A PROXIMITE DE VOTRE POSTE DE TELE OU DE RADIO. IL POURRAIT Y AVOIR DES INTERFERENCES. SI CELA ARRIVE, DEPLACEZ VOTRE LUMINGLAS.

CAN YOU IMAGINE
9324 ETON AVE,
CHATSWORTH, CA 91311
TEL.: (818)727-9555 FAX : (818)727-1911
WEB SITE : http://www.cyi.net E-MAIL : cyimail@cyi.net

90 DAY LIMITED WARRANTY

Can You Imagine warrants to the original consumer purchaser in the USA that this product shall be free of defects in materials and workman-ship for 90 days from the date of purchase with normal home use.

During the warranty period, we will, at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. The product must be returned (with proof of purchase) postage and insurance prepaid to :

Can You Imagine
9324 Eton Ave,
Chatsworth, CA 91311
Phone : 818-727-9555

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other Acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

** THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.